
thermaltake


MINECUBE 360 Ultra ARGB Sync

Scan Here
Installation Guide


Parts List

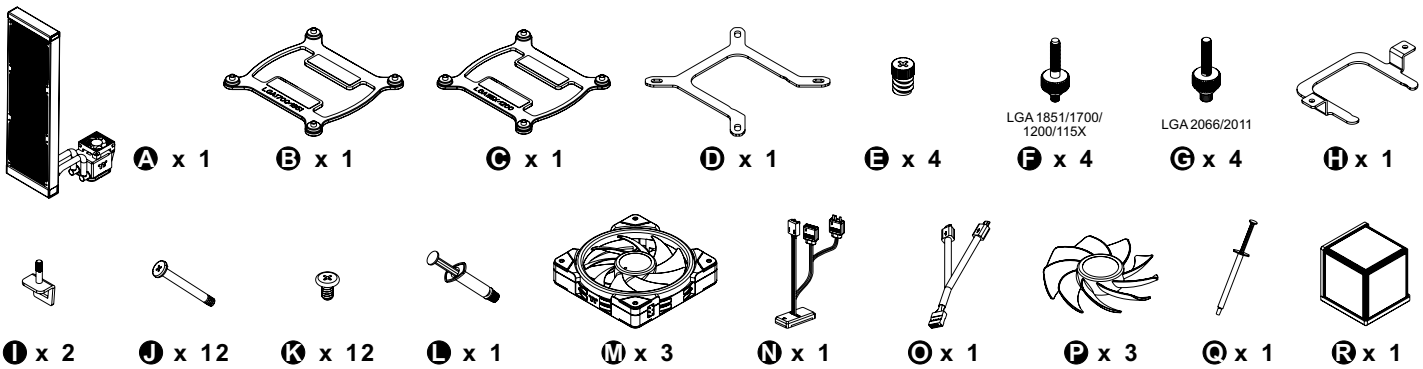

Intel Installation Guide

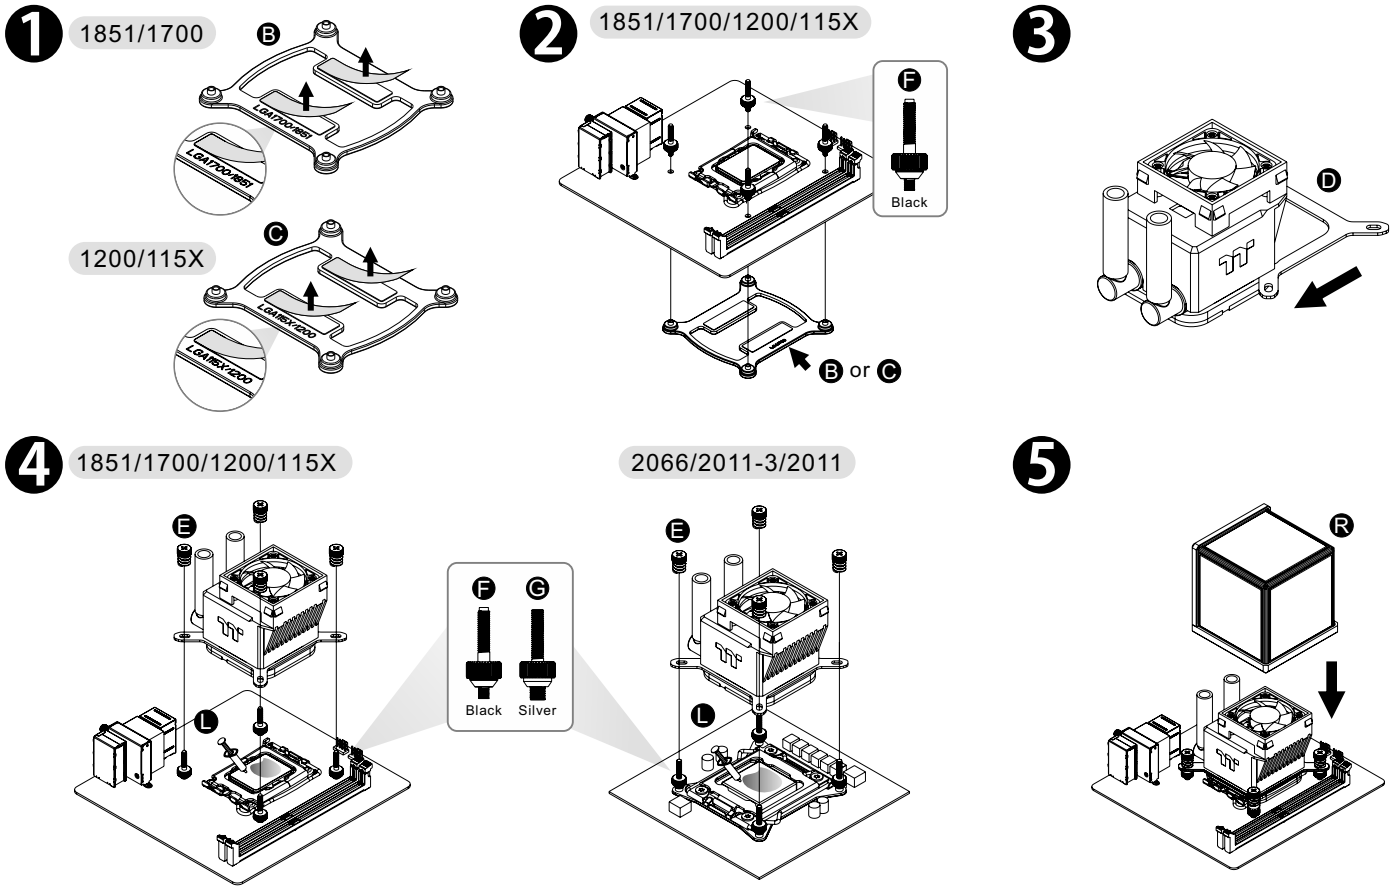

AMD Installation Guide

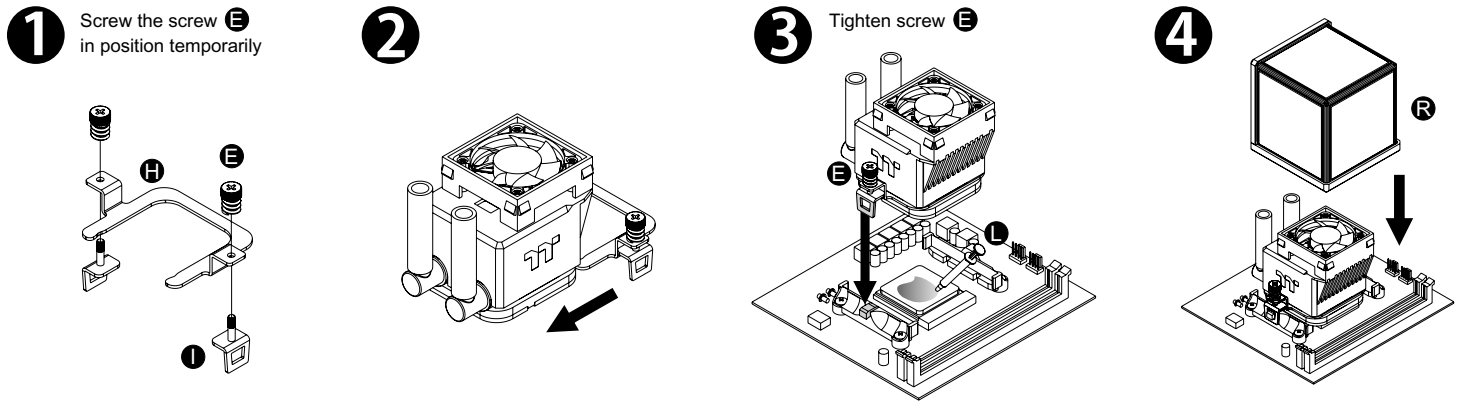


Installation Guide

❶ Choose your fan blade type


Standard Fan Blade (Pre installed on the fan Ⓜ)

Airflow Direction:
Air Exhaust

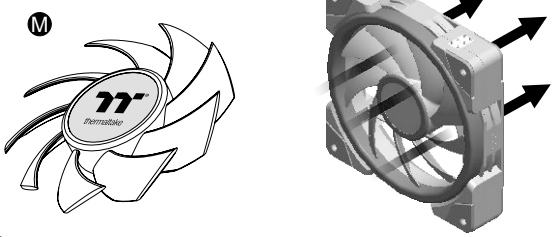


Reverse Fan Blade


Airflow Direction:
Air Intake

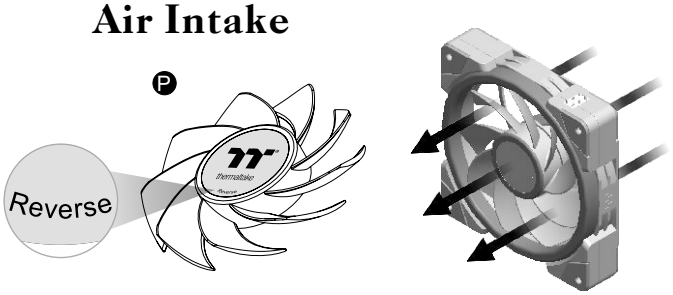


❷ Replace fan blades

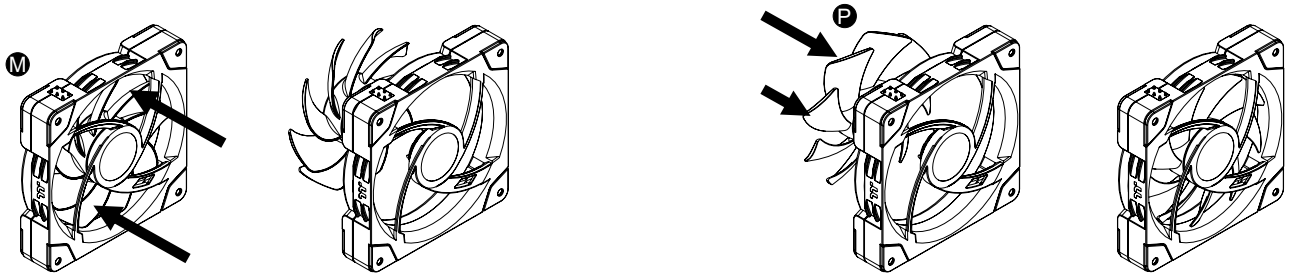


❸

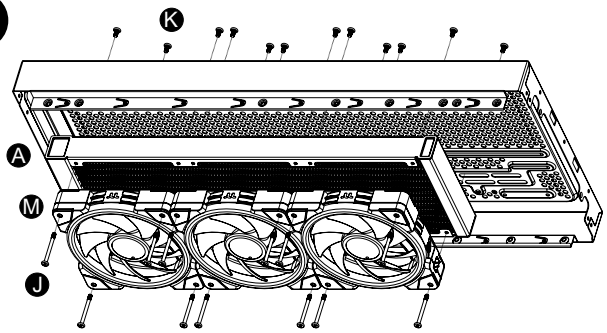


❹

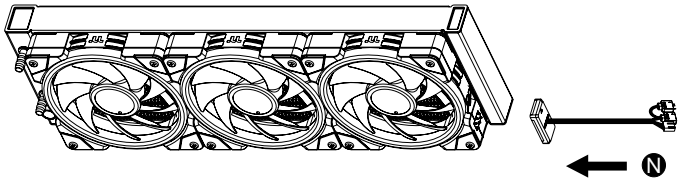


❺

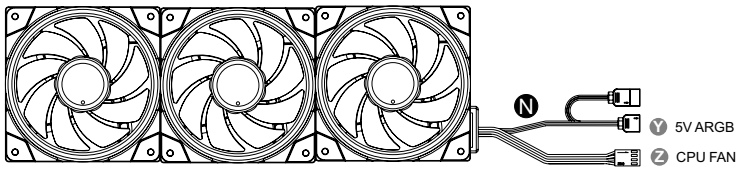

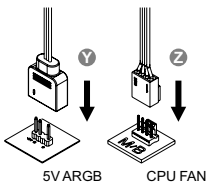

⚠CAUTION Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the fans.


❻

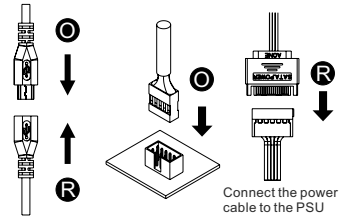


⚠CAUTION
To control the LCD display by TT RGB PLUS Software, Please connect the water block and motherboard with cable O.

❼


Intel

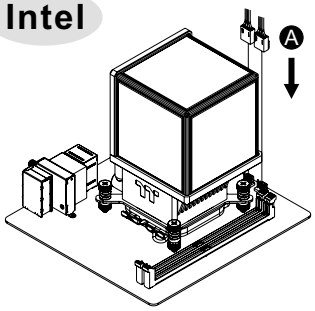

or **AMD**

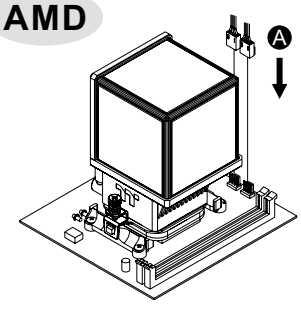

Oil Setup Guide

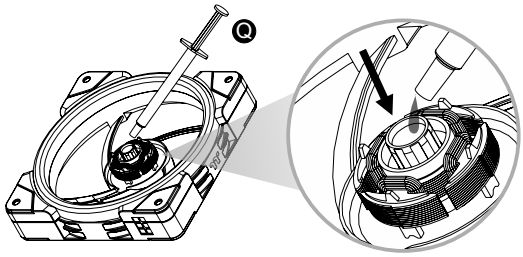

After replacing the fan blades several times, add the oil into the bearing (about 0.1ml)

thermaltake
© 2025 Thermaltake Technology Co., Ltd. All Rights Reserved. www.thermaltake.com
RoHS COMPLIANT