


Neomounts®

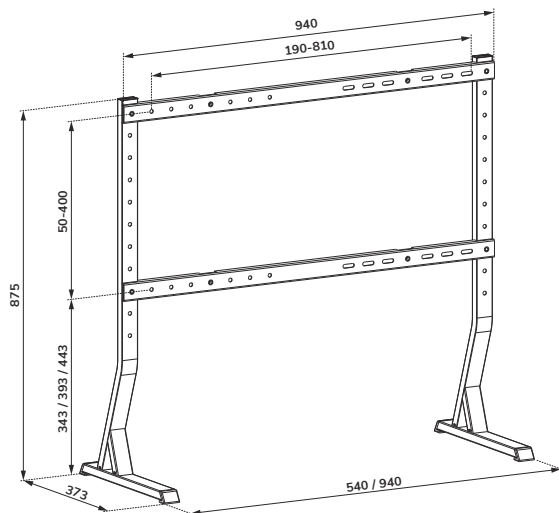

Measuring unit: mm

DS45-430BL18

EN TV desk stand

NL TV-bureaustandaard

DE TV-Tischständer

FR Support de bureau TV

IT Supporto da tavolo per TV

ES Soporte de mesa para TV

PT Suporte de mesa para TV

DK TV-bordstander

NO TV-bordstativ

SE TV-bordsstativ

FI TV-pöytäeline

PL Stojak pod TV

CS Stolní stojan na TV

SK Stolový stojan na TV

RO Stativ de birou pentru TV



DS45-430BL18



200x200 -
800x400 mm




0-60 kg




54,3-64,3 cm


PARTS



A. (x2)



B. (x2)



C. (x2)



D. M8x30
(x4)



E. M6x35
(x4)



F. D8
(x4)



G. D6
(x4)



H. 4mm
(x1)



M-A. M6x14
(x4)



M-B. M8x16
(x4)



M-C. M6x30
(x4)



M-D. M8x35
(x4)



M-E. D8
(x4)




M-F. (x4)



M-G. (x4)


STEP 1

- EN Attach the vertical parts (A) to the feet (C)
 NL Bevestig de verticale delen (A) aan de voeten (C)
 DE Befestigen Sie die vertikalen Teile (A) an den Füßen (C)
 FR Fixez les parties verticales (A) aux pieds (C)
 IT Fissare le parti verticali (A) ai piedini (C)
 ES Fije las partes verticales (A) a los pies (C)
 PT Fixar as partes verticais (A) aos pés (C)
 PL Przymocuj części pionowe (A) do nóżek (C)

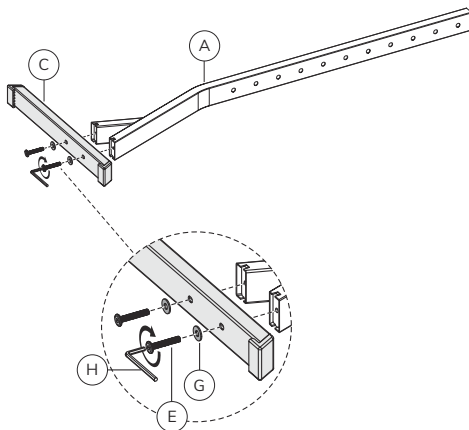

STEP 2

- EN** Install the brackets to the screen and use spacers if necessary
- NL** Installeer de beugels op het scherm en gebruik zo nodig afstandhouders
- DE** Befestigen Sie die Halterungen an dem Bildschirm und verwenden Sie Distanzscheiben, wenn nötig
- FR** Installer les supports sur l'écran et utiliser des entretoises si nécessaire
- IT** Installare le staffe sullo schermo e utilizzare i distanziatori, se necessario
- ES** Instale los soportes en la pantalla y utilice separadores si es necesario
- PT** Instale os suportes no ecrã e utilize espaçadores, se necessário
- PL** Zamontuj wsporniki do ekranu i w razie potrzeby użyj elementów dystansowych

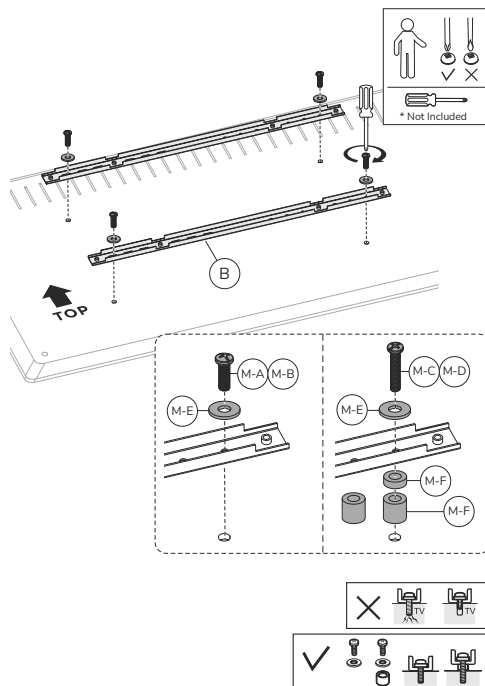

STEP 3

- EN** Determine the desired position of the supporting legs and attach them to the brackets
- NL** Bepaal de gewenste positie van de steunvoeten en bevestig ze aan de beugels
- DE** Stellen Sie die gewünschte Position der Stützfüße fest und befestigen Sie sie an den Halterungen
- FR** Déterminer la position souhaitée des pieds de support et les fixer aux supports
- IT** Determinare la posizione desiderata delle gambe di supporto e fissarle alle staffe
- ES** Determine la posición deseada de las patas de apoyo y fíjelas a los soportes
- PT** Determinar a posição desejada dos pés de apoio e fixá-los aos suportes
- PL** Określ żądaną pozycję nóg podpierających i przymocuj je do wsporników

